





BN-35CL

Current Loop Meter 3 1/2 Digit 0.56" LED in a 1/16 DIN Case

Isolated-Power Process Meter in Compact DIN 96x24mm Case.


General Features

- INTERNALLY ISOLATED 24VDC power (standard)
- Optional internally isolated 9V, 12V, or 15VDC power supply
- International standard DIN 96x24mm case
- Short depth case: 2.83" (72mm) behind panel
- 0.56" high red LEDs standard
- · Adjustable display brightness
- Optional green or extra bright red LEDs available
- Display Hold and Test
- · Auto zero and polarity
- Ideal for OEM applications

The BN-35CL is a streamlined 4 to 20mA current loop meter. It is specifically designed to be easily user-scaled and calibrated to almost any conceivable engineering unit, such as temperature, pressure, viscosity, or flow rates, etc. without requiring component changes. On site scaling and recalibration is facilitated by multiturn potentiometers that provide continuous adjustment within each of three header-programmable full scale ranges for span and zero offset.

The display is shipped standard with red LEDs, but green LEDs or super bright LEDs for high ambient light environments are also offered. Display Segment Test and Hold Reading are standard features.

Typical Application Connections

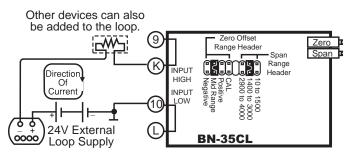

Compatibility

The BN-Series have a matching DIN case style that is complementary to the Lynx, Leopard and Tiger family of meters. BN-Meters are the OEM's choice for economical switchboard and process indication. For economy, each model is dedicated to a specific application and designed for quick and easy installation.



Specifications

Full Scale Ranges:User adjustable to any scaling between

-1999 to +1999.

Input Impedance:70Ω. Maximum 1.4V drop

A/D Converter:12 bit dual slope

Accuracy:±(0.05% of reading + 2 counts)

Temperature Coefficient: 100 ppm/°C (Typical)

Warm Up Time:.....2 minutes to specified accuracy
Conversion Rate:............3 conversions per second (Typical)

super bright red LEDs.

Polarity:Assumed positive, displays negative sign

Decimals:.....User programmable to 3 positions

Overload Indication:......When input exceeds full scale on any range

being used, most significant "1" digit and polarity symbol are displayed with all other

digits blank.

Power Supply:......24VDC @ 90mA (standard) 9VDC @ 200

mA; 12VDC @ 160mA;15VDC @ 120mA;

depending on option selected

Operating Temperature: ..0°C to 60°C

Storage Temperature:-40°C to 85°C

Relative Humidity:95% (non condensing)

Case Dimensions:Bezel: 96X24 mm (3.62" X 0.95")


Depth behind bezel: 56.5 mm (2.23") Plus 27 mm (1.06") for Push-On connector or plus 17.5 mm (0.68") for Edge connector

Weight:.....85 gms. (3 oz)

125 gms. (4.4 oz) when packed


BN-Series, For Those Applications Where Space Is A Premium

Functional Diagram

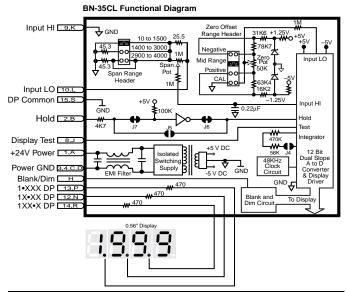

Connector Pinouts

The Texmate model BN-35CL interconnects by means of a standard PC board edge connector having two rows of 15 pins, spaced on 0.156" centers. Texmate also offers a Push-On screw terminal connector that provides a great advantage in ease-of-use (see pg. 3). Connectors are available from Texmate.

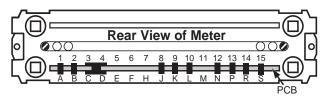

METER REAR WITH PCB EDGE CONNECTOR MOUNTED nal blocks see rear page) SOLDER SIDE PINS (For mounting COMPONENT SIDE PINS Positive DC Power Input - 1 A - Positive DC Power Input Hold Reading - 2 B - Hold Reading Negative DC Power Input - 3 C - Negative DC Power Input Negative DC Power Input - 4 D - Negative DC Power Input Е Н Display Test - 8 J - Display Test Signal High Input - 9 K - Signal High Input Signal Low Input - 10 L - Signal Low Input м Decimal Points - 12 N - Decimal Points Decimal Points - 13 P - Decimal Points R - Decimal Points Decimal Points - 14 Decimal Select Common - 15 S - Hold/Test Common FINE "SCRAPE OFF" TRACKS SOLDER JUNCTION

Pins 1 & A - Positive DC Power Input: These pins are internally connected together. The positive end of the DC power is connected to these pins. The standard BN-35CL meter is designed to be powered from a 24VDC power supply. Optional 9V, 12V, or 15VDC powered models are also available. Before using the meter, make sure that the appropriate power is being applied. The BN-35CL meter generates a ±5V supply internally that is isolated from the applied DC power.

Pins 2 & B - Hold Reading: These pins are internally connected together. If these pins are left unconnected, the meter will operate in a free-running mode. When this pin is connected to the Common Pin S, the meter will latch up. A/D conversions will continue, but the display will not be updated until Pins 2 & B are disconnected from Pin S.

Pins 3, 4, C, and D - Negative DC Power Input: These


pins are internally connected together. The negative end of the DC power is connected to these pins. The standard BN-35CL is designed to be powered from a 24VDC supply. Optional 9V, 12V, or 15VDC powered models are also available. Before using the meter, make sure that the appropriate power is being applied. The BN-35CL meter generates a \pm 5V supply internally that is isolated from the applied DC power.

Pins 8 and J - Display Test: These pins are internally connected together. All numeric display segments will light up when this pin is connected to the Common Pin S.

Pins 9 and K - Signal High Input: These pins are internally connected together. Signal high input for the meter. Pins 10 and L - Signal Low Input: These pins are internally connected together. Signal low input of the meter . Pins 12 & N, 13 & P and 14 & R - Decimal Points: These are the decimal point pins. Connecting any of these pins to the Decimal Select Common Pin 15 makes that particular decimal point come on.

Pin 15 - Decimal Select Common: This pin is the internal supply ground which is isolated from Pins C, D, 3, and 4. The decimal point pins must be connected to this pin to come on.

Pin S - Hold/Test Common: This pin is connected to the internal supply ground which is isolated from Pins C, D, 3 and 4. The Hold and Test pins must be connected to this pin to be activated.

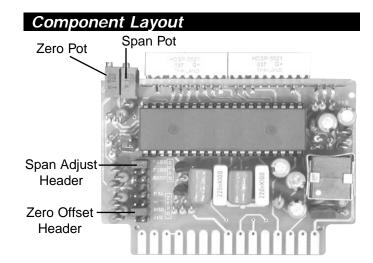

Signal Conditioning Components




SPAN Potentiometer (Pot)

The 15 turn SPAN Pot is always between the distiller and the zero pot (as viewed from the front of the meter). Typical adjustment is 37% of the input signal range.

SPAN ADJUST Header

This three position header enables the SPAN Pot, in three equal overlapping 37% steps, to precisely scale down the input Signal Span, to provide any required Digital Display Span. Without any scaling or offset, a 4mA to 20mA input would produce a digital output of 1000 to 5000, which is a Digital Display Span of 4000 counts.

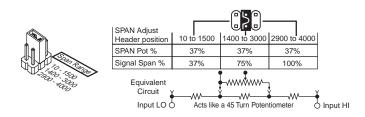




ZERO Potentiometer (Pot)

The ZERO Pot is to the right of the SPAN Pot. It enables the Digital Display Span to be offset 2000 to 2700 counts, depending on the Zero Offset Range Header position selected.

ZERO OFFSET RANGE Header

This four position header enables the ZERO Pot to offset the Digital Display Span -3000 to +2000 counts with a user selectable Negative offset, Mid-range (- & + offset), Positive offset, and a Calibrate position (ZERO Pot disengaged). The Calibrate position facilitates a simple two step calibration with no interaction between Span and Offset.

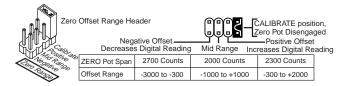

Calibration Procedure

The first step is to disengage the ZERO Pot and scale down the Signal Span input to produce the desired Digital Display Span output.

Signal Span is defined as the total change of signal input that would be required for a specific change of the Digital Display. The largest Signal Span that can be specified with a 4 to 20mA input is 16mA. A 4mA Signal Span proportionately scaled can meet full scale display accuracy.


Digital Display Span is defined as the exact total in counts, that the display would change within a specific Signal Span. The largest Digital Display Span that can be displayed is -1999 to +1999 (4000 counts). 16mA can not display +4000, so instead 4mA can be scaled to +1000.

The second step is to select a Zero Offset Range and offset the Digital Display Span with the ZERO Pot, until the desired reading is displayed.

Maximum offset is -3000 to +2000 counts. A Digital Display Span of 4000 counts requires an offset of -3000 to display -1999 to +1999.

For example: A 4 to 20mA input to read -40.0 to +199.9 Signal Span = 16mA, Digital Display Span = 2400 counts.

 Remove the meter from its case and set the Zero Offset Range Header to the Calibrate position. Select the 1400 – 3000 position on the Span Adjust Header and slide the meter back into the case.

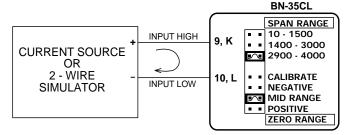

- 2. Connect power to the meter and apply 4mA (25% of 16mA). Adjust the SPAN Pot until the display reads +600 (25% of 2400). The meter is now scaled for a Signal Span of 16mA and a Digital Display Span of 2400 counts. In the example 4mA should read -400 and 20mA read 1999, therefore the Digital Display Span should be offset by -1000.
- Disconnect power and remove the meter from the case, select the Negative offset position on the ZERO OFFSET RANGE Header, and slide the meter back into the case.
- 4. Connect power to the meter, apply 4mA and adjust the ZERO Pot until the display reads -400. With the Digital Display Span now offset by -1000 counts, the meter will read -400 for a 4mA input, and read +1999 for a 20mA input. Select decimal point 1XX•X to display -40.0 to +199.9.

Opening Back Panel

Unscrew the knurled collars, and remove the mounting clips. Snap out the rear plastic plate. The BN-35CL printed circuit board can then be easily removed by sliding it out from the rear of the case .

Power Supply

The BN-35CL ships from the factory with an isolated 24VDC power supply.

Push-On Screw Terminals

They provide the greatest convenience and ease of use

Texmate's exclusive optional Push-On Connectors combine an edge card connector and a 10 position screw terminal block. Push-On Connectors are ordered preconfigured for each specific power supply voltage and each optional power supply available for the BN-Series.




CN-PUSH/BN

Optional PCB Edge Connector

PCB Edge Connector

A standard 30-pin edge connector (two rows of 15 pins on 0.156" centers) may be used to connect the BN-35CL meter. Order part no. CN-L15.

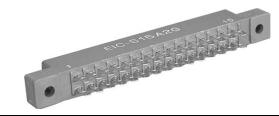


Custom Face Plates



Texmate Produces Thousands of Custom OEM Face Plates

Have Texmate Design and Install a Custom Face Plate to Suit your Next project!

- Custom face plates have a nonrecurring artwork charge. A serial number is then assigned to each artwork, to facilitate re-ordering.
- Small Run or One-Off custom face plates incur an installation charge, and are generally printed on a special plastic film, which is then laminated to custom faceplate blanks as required.
- Large Run (250 pieces min): custom face plates are production silk screened, issued a part number, and held in stock for free installation as required by customer orders.
- OEMs may also order Custom Meter Labels, Box Labels Custom Data Sheets and Instruction Manuals.

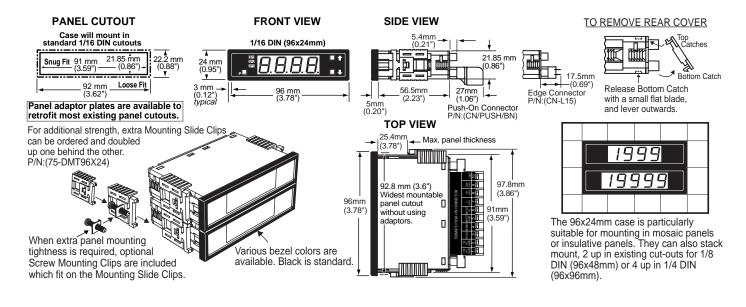

Ordering Information

Standard Options for this Model Number

Part Number

Description

▶ BASIC MODEL NUMBER Includes standard display and standard power supply unless optional versions are ordered.

BN-35CL3.5 digit, Isolated 24VDC Power, 4-20mA input

DISPLAY

STANDARD......Red LEDs, 0.56 inch high

BN-GREENGreen LED, 0.56 inch high

. . . . Super bright Red LEDs, 0.56 inch high

POWER SUPPLY

STANDARD......Isolated 24VDC V0-ISO/PS-09 Isolated 9V DC V0-ISO/PS-12 Isolated 12V DC

V0-ISO/PS-15 Isolated 15V DC

Special Options and Accessories

Part Number

Description

▶ SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)

... Non-Std Range and Scale Changes, 3.5 Digit Meters CB-FS35.

ACCESSORIES

CN-PUSH/BN BN Series Push-on Screw Terminal Block Connector 75-DMTC96X24 Side Slide Brackets, extra set (96x24mm only) 75-DBBZ96X24 Black Bezel for 96x24mm Case, BN and AM series DN.CAS96X24 Din Case 96 X 24 Short Depth with Bezel

Prices subject to change without notice.

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.

EXMATE INC

995 Park Center Drive • Vista, CA 92081-8397

Tel: 1-760-598-9899 • USA 1-800-839-6283 • That's 1-800-TEXMATE

Fax: 1-760-598-9828 • Email: sales@texmate.com • Web: www.texmate.com

Texmate has facilities in Japan, New Zealand, Taiwan, and Thailand. We also have authorized distributors throughout the USA and in 28 other countries.

For product details visit www.texmate.com

Local Distributor Address

Copyright © 2004 Texmate Inc. All Rights Reserved.